



Bild-Nr. Pos.-Nr. Pos.-No.	Best.-Nr. Order Nr. No. de Cde. Ref.-Nr.	Starter – Starter – Lanceur – Arranque	
1	00 10 182	Zylinderschraube AM 5 x 20 DIN 84 Z. B. Startergehäuse (enth. Pos. 15)	Fill. Head screw Starter Housing, assy. (item 15 incl.)
2	21 00 465		
3	26 00 256	Z. B. Rückzugfeder	Rewind spring, assy.
4	20 74 288	Seilrolle	Rope pulley
5	20 74 388	Kulisse	Plate
6	60 74 294	Starterklinke	Pawl
7	00 73 364	Federstecker	Pin
9	00 63 152	Starterseil	Starter rope
10	20 74 403	Startergriff	Starter grip
11	26 00 255	Z. B. Starter	Starter assy.
12	20 12 726	Anwurfrolle	Starter pulley
13	40 73 580	Zwischenflansch	Intermediate flange
14	00 10 167	Zylinderschraube AM 5 x 22 DIN 84	Fill. Head screw
15	00 34 147	Federring A 5	Spring ring
16	00 20 131	Sicherungsmutter M 5	Nut
17	00 31 527	Ausgleichsscheibe	Washer